


FT-0124 Newport Fountain (19 pieces) COMPONENTS AND PARTS LIST

Revised September 22, 2008

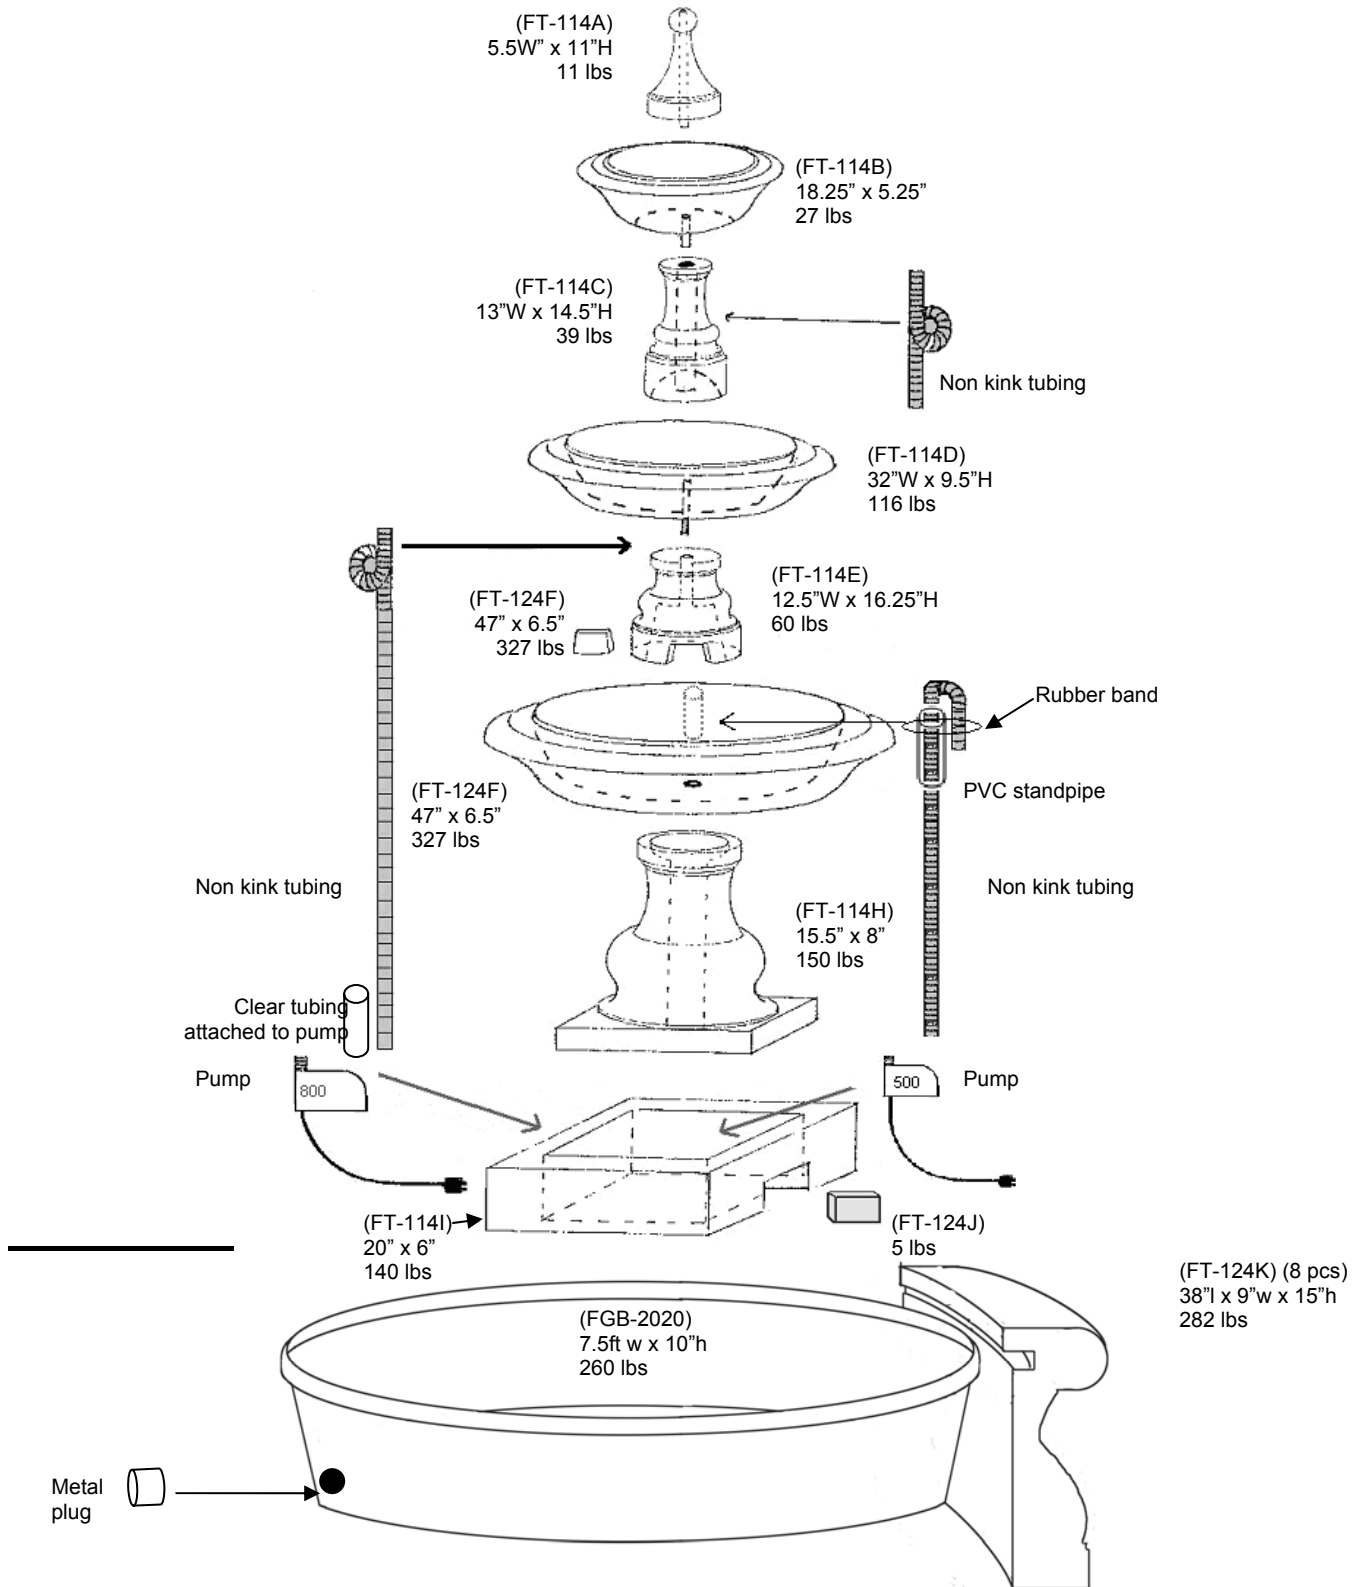

Pump Kit Parts List

- PK800 pump (1)
- PK500 pump (1)
- 3" length of 3/4" Clear Vinyl tubing (1) (Preassembled)
- 3" length of 5/8" Clear Vinyl tubing (1) (Preassembled)
- Approx. 15" length of 1/2" Black Non-Kink tubing (1)
- Approx. 50" length of 1/2" Black Non-Kink tubing (2)

- Hose clamps (5)
- Rubber band (1)
- Plumbers Putty (2)
- Wedges (12)
- #10 rubber stopper with wide hole (1)
- 9" length of 1 1/2" PVC pipe (1) to use as stand pipe
- Metal plug for hole in side of basin (1)

Note – Hose clamps may be used for restrictor flow

FT-124 Newport Fountain (19 pieces) **ASSEMBLY INSTRUCTIONS**

Revised September 22, 2008

PROFESSIONAL INSTALLATION IS RECOMMENDED FOR THIS FOUNTAIN!

1. Make sure you are assembling your fountain on a level surface using a sand or gravel base.
2. Be sure to check the leveling of the fountain after each component installation.
3. Feed the pump cord through the hole in the basin leaving enough cord length inside basin to work with the pump. It is recommended that you leave enough cord length to extend from the middle of the basin to the edge. (approx. 3 feet)
4. To ensure a level installation, make sure that you run the remaining cord through the channel in the bottom of the basin.
5. Wrap a piece of putty around both cords together where you will be placing the stopper.
6. Fit cord into stopper.
7. Place a piece of putty inside the length of the slit in the stopper.
8. Wrap putty around outside of stopper ensuring that the slit and the cord hole are covered and sealed.
9. Press stopper firmly into the hole of basin.
10. Loosely wrap cords up in the center of the basin.
11. Place the fountain base (FT-114I) over the pumps and the cords. Ensure it is level.
12. Place the large pedestal (FT-114H) on top of the base. Ensure it is level and centered on the base.
13. Place the large bowl (FT-124F) on top of the large pedestal. Ensure it is level and centered on the pedestal.
14. Place the standpipe inside the hole of the large bowl.
15. Insert both 50" length of ½" non kink tubing through the pipe onto the bottom of the base. Make sure to feed the end with the assembled clear vinyl tubing down into the basin.
16. Fold the end of one of the lengths of tubing down over the edge of the standpipe.
17. Secure that tubing by placing the rubber band over the tubing and pipe so that the tubing opening points down into the bowl.
18. Place a hose clamp over the end of the tubing down inside the basin that does not have the clear vinyl assembly and connect it to the PK500 pump. Tighten the hose clamp to ensure a good seal.
19. Insert the remaining tubing coming out of the standpipe up through the pedestal (FT-114E) and place the pedestal over the standpipe in the center of the large bowl. Ensure it is level and centered.
20. Place a hose clamp over the top end of the tubing and connect that end of the tubing to the bottom of the middle bowl (FT-114D). Tighten the hose clamp to ensure a good seal.
21. Place the middle bowl down onto the middle pedestal. Ensure it is level and centered on the pedestal.
22. Place a hose clamp over one end of the 15" length of ½" non kink tubing.
23. Connect that end of the tubing to the pipe protruding out from the top of the middle bowl (FT-114D). Tighten the hose clamp to ensure a good seal.
24. Feed the other end of the tubing up through the small pedestal (FT-114C) while lowering the pedestal down into the middle bowl. Ensure the pedestal is level and centered in the middle bowl.
25. Place a hose clamp over the other end of the 15" length of ½" non kink tubing.
26. Connect that end of the tubing to the bottom of the small bowl (FT-114B). Tighten the hose clamp to ensure a good seal.
27. Place the small bowl on top of the small pedestal. Ensure it is level and centered on the pedestal.
28. Place the finial (FT-114A) in the small bowl by lowering the hole over the copper pipe protruding from the bowl.
29. In the bottom of the basin, connect the ¾" clear vinyl tubing onto the pump water outlet of the PK800.
30. Cover the middle pedestal pump access with the pump cover door (FT-114F).
31. Cover the pump access in the bottom base with the pump cover door (FT-124J).
32. Install the metal plug into the side of the basin.
33. Fill the Basin with water. **DO NOT RUN FOUNTAIN WITHOUT SUFFICIENT WATER. IF THE PUMP IS ALLOWED TO RUN DRY, IT CAN DAMAGE THE PUMP.**
34. Place the coping pieces around the basin, inserting the lip of the basin into the notch in the coping.

FT-124 Newport Fountain

(19 pieces)

Revised September 22, 2008

WINTER CARE AND GENERAL FOUNTAIN INSTRUCTIONS

- W I N T E R C A R E -

Fountain bowls/tops and other fountain components, which collect water, should not be left outside in the winter since any component, which fills with water and freezes may crack. Likewise components such as pedestals, which remain in a basin, filled with water, which then freezes, may also crack or crumble. Ideally, therefore, a fountain should always be stored indoors or in a dry protected place such as a covered porch away from the elements. However, if a fountain must be left outside:

- (1) Remove pump, rubber stoppers, drainpipes, finials, and other small components for storage indoors. Note that stoppers or drainpipes are removed to allow drainage in the event water accumulates in any basin.
- (2) Raise fountain base from ground with wood strips so that base will not freeze to the ground surface.
- (3) Cover or wrap the fountain with burlap or other absorbent material (old blanket or towel) and then cover securely with plastic, making sure that water will not accumulate in the basin or other fountain component and freeze;
- (4) Check fountain periodically to insure that plastic is secure and water is not accumulating in any fountain component.

- G E N E R A L F O U N T A I N T I P S -

Install fountains on a level surface. You will need a properly grounded 110-volt (AC only) GFCI protected receptacle near the fountain for your pump. All pumps are submersible and must be completely underwater to function properly. Test all pumps and adjust to full output prior to assembly. It is not recommended that fountains be placed directly on grass or dirt. Position the channel opening at the base of each fountain toward the electrical outlet to be used since the pump cord will be threaded through this opening.